STEPS FOR HARDWOOD FLOORS

STEP 1

Using the hole in the fixture, pre-drill a hole in the floor with a 1/8 inch drill bit.

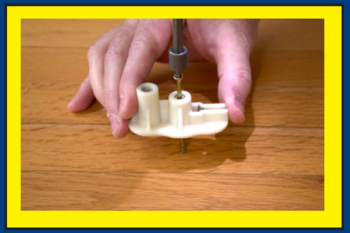

STEP 2

Drive a screw through the shorter opening in the fixture.

STEP 3

The head of the screw will hit the top of the fixture. The screw will then pull and snap at the score.

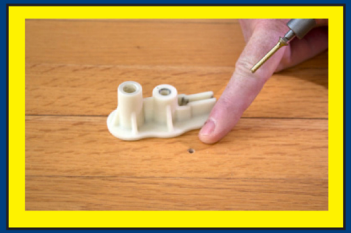

STEP 4

The score is now set 1/5 of an inch below the wood. Fill the hole with putty to finish.

STEPS FOR SOFTWOOD FLOORS

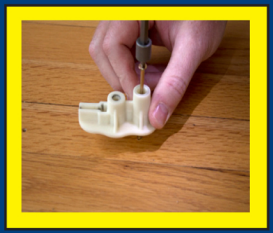

STEP 1

After pre-drilling a hole in the floor, drive a screw through the taller opening in the fixture.

STEP 2

Drive the screw down as far as the fixture will allow.

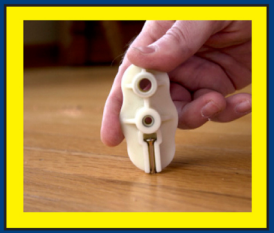

STEP 3

Place the gripper portion of the fixture over the head of the screw.

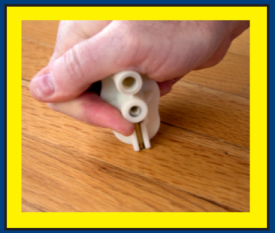

STEP 4

Rock the fixture back and forth until the head of the screw snaps at the score.

STEP 5

The score is now set 1/5 of an inch below the wood. Fill the hole with putty to finish.